


CAUTION


Wiring multiple zones in parallel
Some actuators are not suitable for wiring in parallel due to feedback from actuator. Please check with your damper manufacturer to ensure your actuators are suitable for parallel connection.

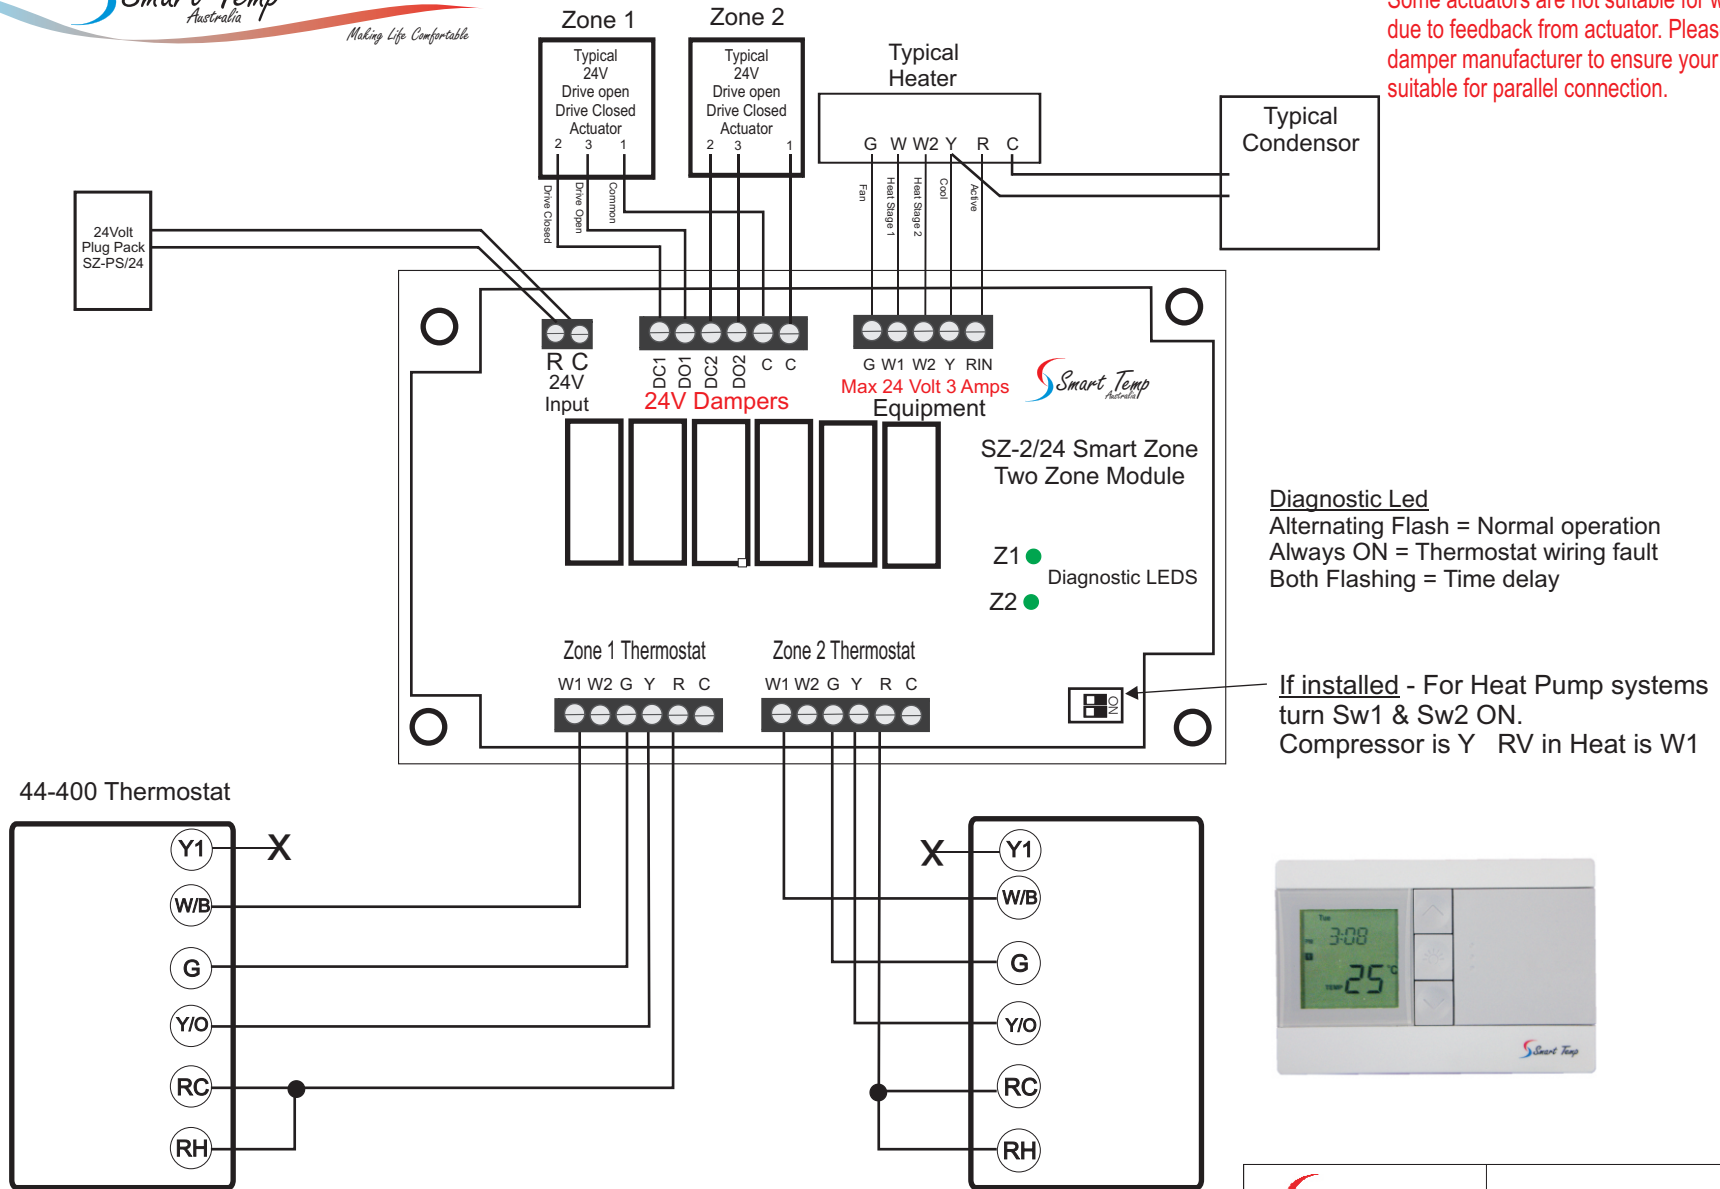


Diagnostic Led

Alternating Flash = Normal operation
Always ON = Thermostat wiring fault
Both Flashing = Time delay


If installed - For Heat Pump systems
turn Sw1 & Sw2 ON.
Compressor is Y RV in Heat is W1

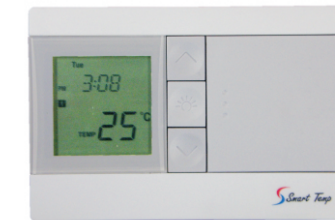

44-400 Thermostat

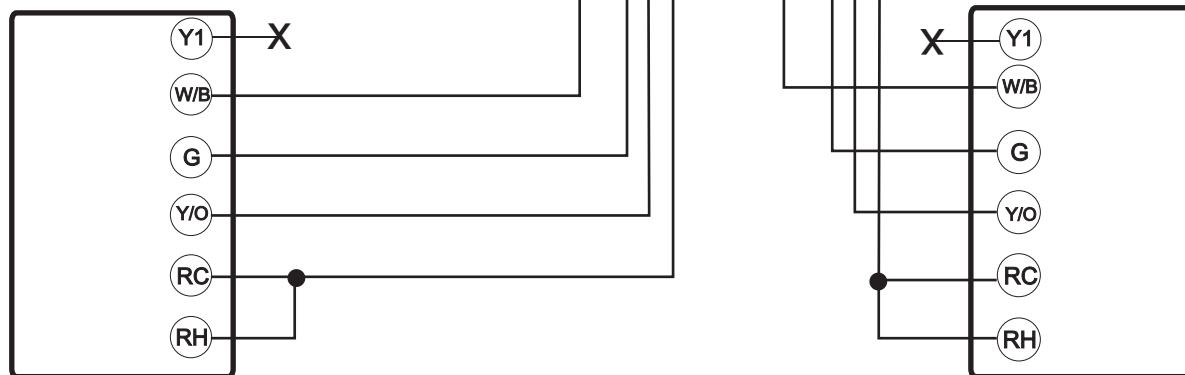

Set Thermostat Switches to:
Deg C
HG
STD

		<h2>Installation Drawing</h2>	
Drawing Revision History		Drawing Name	
		SZ-2/24	Typical Wiring with Smart Temp Thermostat
28-11-2007	Rev C	By JK	All care has been taken in the preparation of this drawing however Smart Temp Australia accept no responsibility for damage that may be caused by using this information. This is a guide only.
29-05-2006	Rev B	By JK	
16-06-2004	REV A	By: JK	
Smart Temp		Ph: (03) 9763 0094 Fax: (03) 9763 0098	www.smart-temp.com.au